

How to clear clogs in your disposal system

1. Unplug the unit to disconnect the power source.
2. Remove objects stuck in the disposal with tongs
 - Warning: Try to avoid placing your hand into the disposal.
3. You may need to crank the bottom of the disposal with an Allen wrench to unclog the lodged material.
4. When ready, push the red reset button located on bottom of disposal.
5. Plug the unit back in and test operation.
6. If the unit still will not operate, contact your plumber for assistance.