


## How to make simple drywall repairs

1. Repair hairline cracks in drywall with a coat of paint.
2. Repair slightly larger cracks with spackle, which is available at paint and hardware stores. See illustrations below.

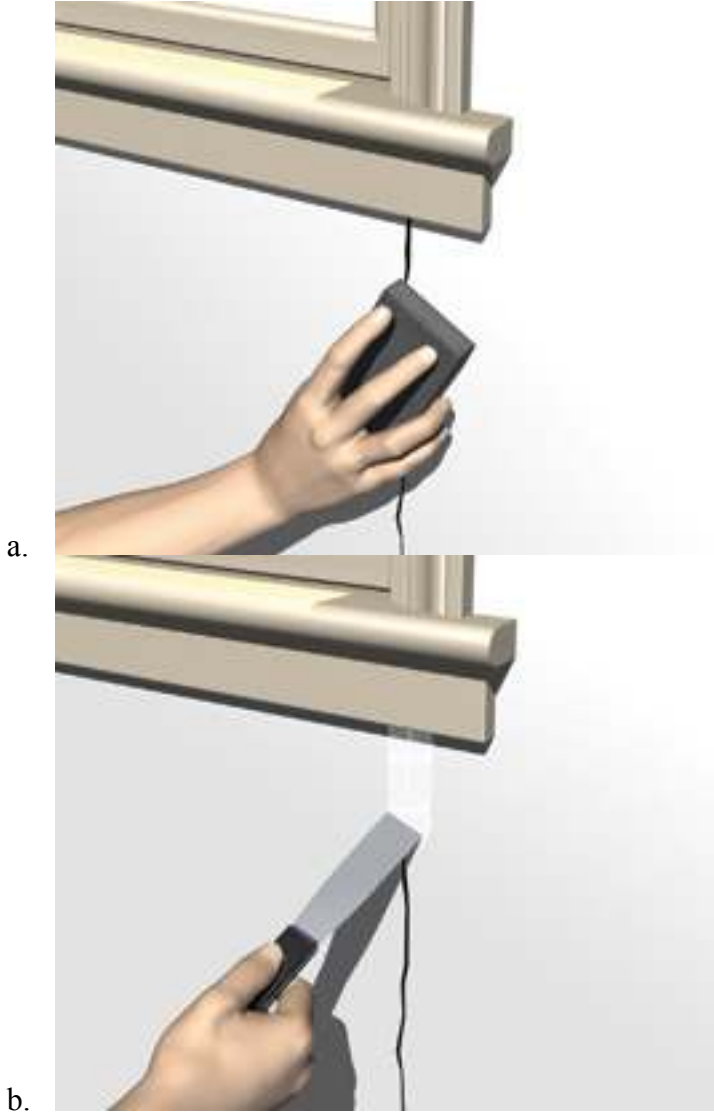

3. To correct a nail / screw pop, reset the nail with a hammer and punch/ screw driver. See illustrations below.



a.



b.



c.

4. Apply two or three thin coats of spackle using a drywall/putty knife.
5. Allow sufficient time for spackle to dry. Read the manufacturer's instructions on the spackle container.
6. When dry, sand the surface with fine-grain sandpaper, and then paint.
7. You can fill indentations in drywall caused by sharp objects in the same manner.